


# Apollo Dual Mode Numeric Synthesized Programming Directions

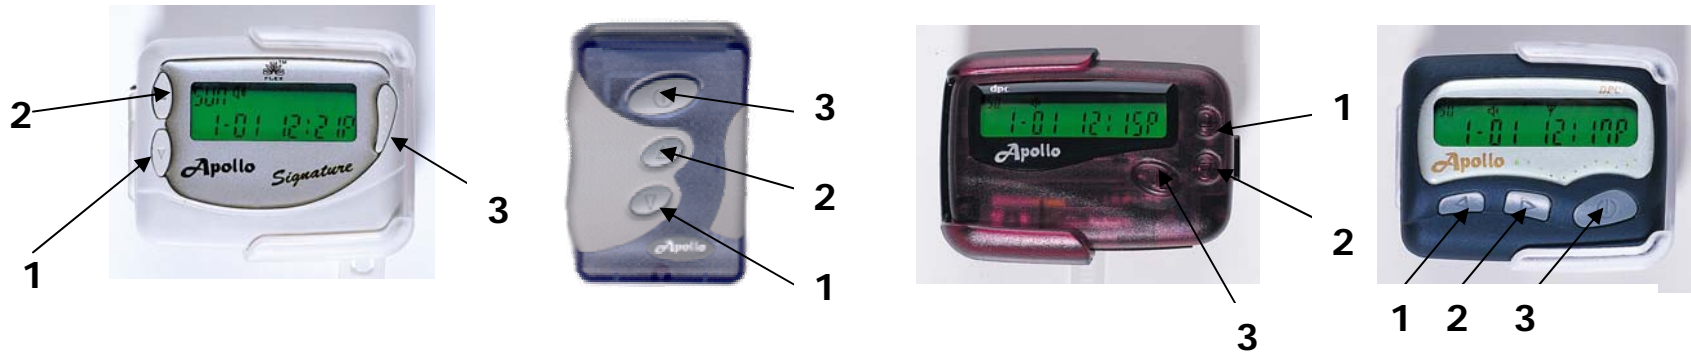

\*TO PROGRAM PAGERS, REMOVE BATTERY AND HOLD DOWN BUTTON 1. INSERT BATTERY AND HOLD BUTTON DOWN UNTIL "PASS 0000", "FLES" OR "POCSAG" SHOWS IN THE DISPLAY.

\*PRESS BUTTON 1 TO CHANGE BETWEEN FLEX (FLES) AND POCSAG PROTOCOL.

## \*FLEX

\*PRESS BUTTON 3 TO CHANGE TO FREQUENCY SCREEN.

\*TO CHANGE FREQUENCY PRESS BUTTON 1 TO CHANGE THE NUMBER (1,2,3, ETC) AND BUTTON 2 TO MOVE TO THE NUMBER TO THE RIGHT. WHEN FREQUENCY IS COMPLETE PRESS BUTTON 3 TO MOVE TO THE NEXT SCREEN CAPCODE.

\* TO CHANGE THE CAPCODE FOLLOW THE STEPS ABOVE TO CHANGE THE NUMBERS AND PRESS BUTTON 3 TO MOVE TO THE NEXT CAPCODE SCREEN. DO THIS FOR ALL CAPCODES THAT NEED TO BE PROGRAMMED. PRESS BUTTON 3 WHEN DONE.

\*Pass "0000" – THIS IS THE LAST SCREEN. A PASSWORD CAN BE ENTERED HERE TO PROTECT THE PAGER. USE BUTTON 2 TO CHANGE THE NUMBER AND BUTTON 1 TO MOVE TO THE NUMBER TO THE RIGHT.

\* PRESS BUTTON 3 UNTIL "PASS" SHOWS AND THE PAGER BEEPS. THIS CONFIRMS THE PAGER HAS BEEN PROGRAMMED.

## \* POCSAG

\* PRESS BUTTON 3 TO CHANGE TO FREQUENCY SCREEN.

\* TO CHANGE FREQUENCY PRESS BUTTON 1 TO CHANGE THE NUMBER (1,2,3, ETC) AND BUTTON 2 TO MOVE TO THE NUMBER TO THE RIGHT. WHEN FREQUENCY IS COMPLETE PRESS BUTTON 3 TO MOVE TO THE NEXT SCREEN CAPCODE

\* BAUD RATE – TO CHANGE THE BAUD RATE PRESS BUTTON 1 TO CHANGE BETWEEN 512 , 1200, 2400. PRESS BUTTON 3 WHEN DONE.

\*Pass "0000" – THIS IS THE LAST SCREEN. A PASSWORD CAN BE ENTERED HERE TO PROTECT THE PAGER. USE BUTTON 2 TO CHANGE THE NUMBER AND BUTTON 1 TO MOVE TO THE NUMBER TO THE RIGHT.

\* PRESS BUTTON 3 UNTIL "PASS" SHOWS AND THE PAGER BEEPS. THIS CONFIRMS THE PAGER HAS BEEN PROGRAMMED.

[WWW.APOLLOPAGERS.COM](http://WWW.APOLLOPAGERS.COM)