

APOLLO A25 GOLD PAGER MANUAL PROGRAMMING INSTRUCTION



TO PROGRAM PAGER, REMOVE BATTERY AND HOLD DOWN BUTTON 1. INSERT BATTERY AND HOLD BUTTON DOWN UNTIL 'pass word' SHOWS IN THE DISPLAY. TO CHANGE PASSWORD PRESS BUTTON 1 TO CHANGE THE NUMBERS (1,2,3, ETC) AND BUTTON 2 TO MOVE TO THE NUMBER TO THE RIGHT . WHEN PASSWORD IS COMPLETE PRESS BUTTON 3 TO MOVE TO THE NEXT SCREEN 'Frequency'. USING BUTTON 1 YOU CAN CHANGE NUMBERS, AND BUTTONS 2 TO MOVE TO THE NEXT NUMBER. WHEN FREQUENCY SCREEN IS COMPLETE PRESS BUTTON 3 TO MOVE TO THE NEXT SCREEN 'Capcode1'. USING SAME BUTTONS, SET UP CAPCODE1 AND MOVE TO THE NEXT SCREEN (Capcode2, Capcode3... Capcode6). WHEN CAPCODES ARE COMPLETE PRESS BUTTON 3 TO MOVE TO NEXT SCREEN (Baud Rate). USING BUTTON 1 CHANGE BAUD RATE TO 512,1200 OR 2400. PRESS BUTTON 3 TO MOVE NEXT SCREEN 'modify password'. USING BUTTON 1 CHANGE NUMBERS (1,2,3 ETC) TO SET UP NEW PASSWORD THEN PRESS BUTTON 3 TO MOVE TO THE NEXT SCREEN 'Adjust Contrast !'. USING BUTTON 1, CHANGE NUMBERS THEN PRESS BUTTON 3. AFTER THIS THE PAGER SHOULD BEEP AND SHOW 'pass'. **REMOVE THE BATTERY AND AFTER A FEW SECONDS INSERT BACK IN AND TURN ON PAGER.**